



HOW TO CHANGE THE WALL PLATE BATTERY

1. If your wall plate is starting to underperform it is probably time to change the battery. This is a really simple process. Firstly you will need a 23AE 12V battery.
2. Carefully remove the front plate, as shown in the video, and then simply replace the battery. Test the unit by pushing the button in the video.
3. And you are good to go.